I N S T R U C T I O N M A N U A L

Model PSB-2400
Universal Flat Panel Display Wall Mount Brackets

The Model PSB-2400is a versatile mounting solution for a variety of Large Flat Panel displays for business, home theater and commercial applications. Display mounting is made simple, safe, and secure using Chief's exclusive Q-latch™ Mounting System.

.

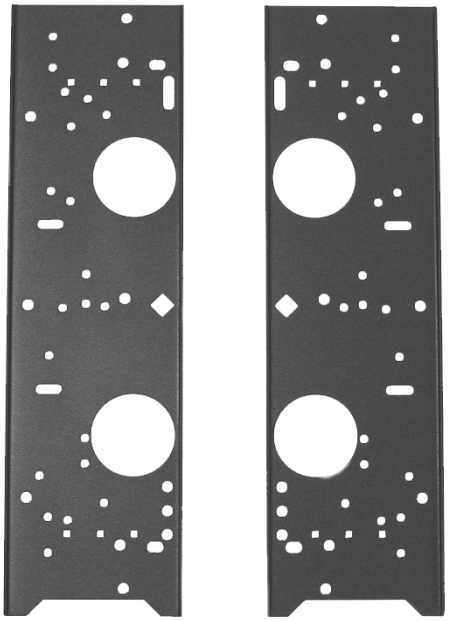

BEFORE YOU BEGIN .....

- **CAUTION:To prevent damage to the mount, which could affect or void the Factory warranty, thoroughly study all instructions and illustrations before you begin to install the mount brackets. Pay particular attention to the "Important Precautions" on Page 1.**
- If you have any questions about this installation, contact Chief Manufacturing at 1-800-582-6480 or 952-582-6480.

CHIEF MANUFACTURING INC.
1-800-582-6480 952-894-6280 FAX 952-894-6918
12800 HIGHWAY 13 SOUTH, SUITE 500
SAVAGE, MINNESOTA 55378 USA

PART NO. 8805-000016 (Rev. G)
©2003 Chief Manufacturing
www.chiefmfg.com
Printed in USA 10-03

IMPORTANT WARNINGS and CAUTIONS!

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

CAUTION: A **CAUTION** alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

- **WARNING: Improper installation can result in serious personal injury! Make sure that the mounting surface structural members can support a redundant weight factor *five times* the total weight of the equipment: if not, reinforce the mounting surface structural members before installing the mount.**
- **WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.**
- **WARNING: Be aware of the potential for personal injury or damage to the unit if it is not adequately mounted.**
- **WARNING: The installer is responsible for verifying that the mounting surface structural members to which the mount is anchored will safely support the combined load of all attached components or other equipment**.
- **WARNING: The combined weight of the display panel must not exceed 150 lbs. (68.04 kg), the maximum load capacity of the mount**.
- **CAUTION:** Check the unit for shipping damage before you begin the installation.
- **CAUTION:** Overtightening mounting screws may damage your Large Flat Panel display.

TOOLS REQUIRED FOR INSTALLATION

- Phillips screwdrivers, No. 1 and No. 2
- Allen wrench set

NOTE: Other tools may be required depending on the method of installation.

CONTENTS

	Page
INSPECT THE BRACKET BEFORE INSTALLING	3
SELECT DISPLAY MODEL AND DETERMINE PARTS	4
DETERMINE MOUNTING BRACKET HOLE PATTERN	7
Groups 1-8 Hole Pattern	7
Groups 9-12 Hole Pattern	8
Groups 13-16 Hole Pattern	9
DETERMINE BRACKET INSTALLATION PROCEDURES	11
Group 1 Installation Procedures	11
Group 2 Installation Procedures	13
Group 3 Installation Procedures	14
Group 4 Installation Procedures	15
Group 5 Installation Procedures	16
Group 6 Installation Procedures	17
Group 7 Installation Procedures	18
Group 8 Installation Procedures	19
Group 9 Installation Procedures	20
Group 10 Installation Procedures	21
Group 11 Installation Procedures	22
Group 12 Installation Procedures	23
Group 13 Installation Procedures	24
Group 14 Installation Procedures	25
Group 15 Installation Procedures	26
Group 16 Installation Procedures	27

INSPECT THE BRACKET BEFORE INSTALLING

1. Carefully inspect the interface brackets (see Figure 1) for shipping damage. If any damage is apparent, call your carrier claims agent and do not continue with the installation until the carrier has reviewed the damage.

NOTE: Read all assembly instructions before starting assembly.

2. Carefully inspect all parts bags to ensure all components are contained in each bag. If any components are missing, contact Chief Manufacturing at 1-800-582-6480 or 952-582-6480

Item	Qty	Description
Bracket	(1)	Left
Bracket	(1)	Right
Parts Bag A:	(4)	10-24 x 7/8" Button Head Cap Screw
	(4)	10-24 Ny-Lock Nut
	(4)	Mounting Button
	(1)	1/8" Allen Key
Parts Bag B:	(8)	.75" OD x .323" ID x .250" Nylon Spacer
Parts Bag C:	(8)	M4 x 20mm Philips Head Screw
	(8)	.55" OD x .25" ID x .0625 Washer
Parts Bag D:	(6)	.75" OD x .344" ID x .50" Nylon Spacer
Parts Bag E:	(6)	M8 x 25mm Philips Head Screw
Parts Bag F:	(8)	M5 x 20mm Philips Head Screw
Parts Bag G:	(6)	M8 x 20mm Philips Head Screw
Parts Bag H:	(8)	M6 x 20mm Philips Head Screw
Parts Bag I:	(6)	M8 x 35mm Philips Head Screw
Parts Bag J:	(4)	M8 x 45mm Philips Head Screw
Parts Bag K:	(6)	18mm OD X 8.3mm ID X 20mm Nylon Spacer
Parts Bag L:	(6)	M5 x 25mm Philips Head Screw
Parts Bag M:	(4)	M8 x 65mm Philips Head Screw

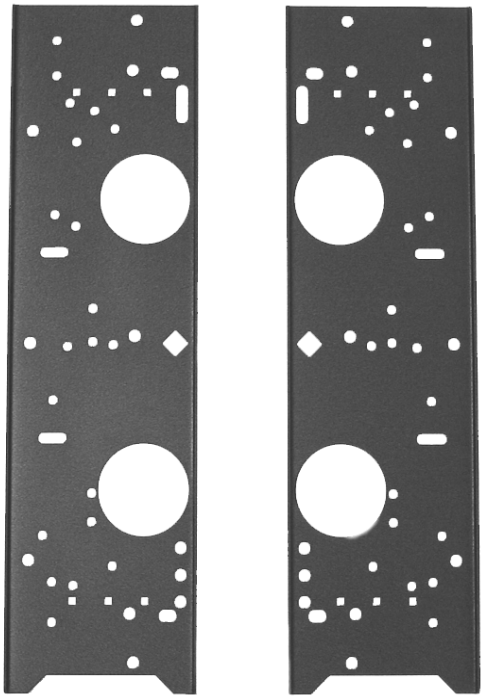

Figure 1. Brackets

SELECT DISPLAY MODEL AND DETERMINE PARTS

These interface brackets are designed to fit a wide variety of display models. Study the following information carefully to select the proper hardware and assembly procedures for your specific Large Flat Panel display model. To determine the correct hardware and procedures, perform the following:

1. Using the chart below, locate your Large Flat Panel display model.
2. Note and record the group number for your Large Flat Panel display model.
3. Note and record the parts bags required for your Large Flat Panel display model.

NOTE: Not all hardware will be used for every installation. Do not discard extra hardware until installation is complete.

4. Using the group number determined in Step 2, proceed to"DETERMINE MOUNTING BRACKET HOLE PATTERN" on page 7 and follow the instructions for you Large Flat Panel display model.

Group #	Plasma Flat Screen		Parts Bags
1	Fujitsu 42"	PDS-4208, PDS-4209, PDS-4211, PDS-4212, PDS-4213, PDS-4214, PDS-4221, PDS-4222, PDS-4229, PDS-4233, PDS-4234, PDS-4241, PDS-4242	A, B, F
	Sony 42"	PFM-42B1, PFM-42B1U, PFM-42B2	
2	Fujitsu 42"	P42 SERIES PLASMAS	A, I, K
3	Fujitsu 50"	P50 SERIES PLASMAS	A, B, E
4	DWIN	HD-50	A, J, K
	Fujitsu 50"	PDS-5001, PDS-5002, PDS-5003, PDS-5004,	
	JVC 50"	GD-500PCE, GD-500PZU, GD-V501U	
	Panasonic 37"	TH-37PWD4UZ, TH-37PWD5UZ, PT37D4P, PT-37P1, TH-37PWD4E, TH-37PW5B, TH-37PWD5BX	
	Panasonic 42"	PH-42PWD3, PT-42PD1-P, PT-42PD2-P, PT-42P1, TH-42PW3U, TH-42PW4U, TH-42PW4UY, PT-42PD3-P, TH-42PW4EX, PT-42PHD4-P, TH-42PHD5UY, TH-42PWD5UY, TH-42PHD6UY, TH-42PWD5UY, TH-42PW5B, TH-42PHD5BX, TH-42PWD5BX	
	Panasonic 50"	TH-50PHD3E, TH-50PHW5B, TH-50PHD5UY, TH-50PHD3U, TH-50PWD5EX, PT-50PHD3-P, PT-50PHD4-P, TH-50PHW5B, TH-50PHD5BX	
	RUNCO 42" & 50"	PL-42CX, PL-50cx	
	Toshiba 42"	PD42W1, PD42WP16	
	Toshiba 50"	50HP81, 50PW16	
	Viewsonic 42"	VPW420	
	Yamaha 50"	PDM-1	
5	LG 40"	MU-40PA10B	A, D, L

6	Electrograph 42”	DTS42W	A, D, I
	Gateway 42” & 46”		
	HD Vision 46”	HDV46P2	
	Net-TV 42”	PDP-42V	
	Sampo 42”	PME-42S6, PME42X6	
	Viewsonic 42”	VPW425	
7	BenQ 46”	PDP46W1	A, B, H
	Chungwa 46”	SN4210P	
	Optoma 46”	PD-46	
	Princeton Graphics 46”	AR4.6PDP	
	Tatung 46”	P46	
8	BenQ 42”	PDP7859	A, B, H
	Samsung 50”	HPN5039	
9	Dreamvision 42”	REVOLUTION ONE	A, B, C,
	Dreamvision 50”	REVOLUTION FIVE	
	Integra 50”	PLA-50V1	
	Marantz 42”	PD-4280, PD-4290D, PD-4292D, PD-4293D,	
	Marantz 50”	PD-5010, PD-5020	
	Mitsubishi 50”	PD-5010	
	NEC 42”	PX-42M2A, PX-42M3A, PX-42M4A, PX-42PD1, PX-42VP3A, PX-42M5A, PX-42VM1A, PX-42VM2A, PX-42VP1A, PX-42VP2A, PX-42VP4, PX-42VP4D, PX-42VM3A, PX-42VM4A	
	NEC 50”	PX-50M5A, PX-50VP1A, PX-50XM1A, PX-50VP2A, PX-50XM2A, PX-50XMSA	
	Philips 50”	50FD9955	
	RCA 42”	PR42300	
	RCA 50”	PHD50300	
	RUNCO 42”	PL-42, PL-42c, CW-42	
	Sanyo 42”	PDP-42WE1	
	Thomson 42”	42WS93E, 42WS94, 42WS95	
	Thomson 50”	50WS94, 50WS95	
	Toshiba 42”	42HP82	
	Toshiba 50”	50HP82	

10	Pioneer 43”	PDP-4330HD, PDP-433CMX, PRO 900HD, PDP-433HDE	A, B, E
	Sharp 43”	PZ-43HV2U	
	Runco 43”	PL-43HDX	
	Dukane 50”	P50	
	EIZO 50”	P5070, P5071	
	Hitachi 50”	CMP5000WXE, CMP5000WXU	
	Pioneer 50”	PDP-V501X, PDP-V501MC, PDP-V502MX, PDP-503HDE, PDP-505HD, PDP-503CMX, PRO 1000HD, PDP-503HD, PDP-503MXE	
	Runco 50”	PL-50cx, PL-50HDX	
	Sharp 50”	PZ-50HV2U, LC-PD50U	
	Trans-Lux	PLASMA 5000	
	Viewsonic	VPW500	
11	JVC 42””	GD-V4200PZW, GD-4210PZW, GD-4210PCE, GD-4211PZW, GM-P420UG, GM-P420PCE	A, B, F
	HD Vision 42	HDV42A	
12	HELIOS	HLTV4200B	A, I, K
	Samsung 42”	PS-42P2S, PPM42S2, SPL4225K	
13	Samsung 50”	HPL5025, PDP-50VG, PDP-50HD, PPM50H2	A, I, K
14	Gateway 50”		A, D, I
	Viewsonic	VPW505	
	Sampo	PME-50X6	
15	Cornea 42”	MP4200	A, B, F
	LG 42”	MU-42PZ11B	
	Zenith 42”	P42W22	
16	LG 50”	MU50PZ41B	A, B, F
	Zenith	P50W26	

DETERMINE MOUNTING BRACKET HOLE PATTERN

Each interface bracket has 6 square holes for attaching mounting buttons (See Figure 2). These holes are arranged in a 14” vertical spacing pattern. When the proper hole pattern is used, the mounting buttons will form a 14” X 24” pattern when installed on your Large Flat Panel display. The following steps will explain how to attach the mounting buttons in the proper square holes for your specific Large Flat Panel display model.

Groups 1-8 Hole Pattern:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

1. Lay the interface brackets out with the bent lip of each interface bracket down (see Figure 2).
2. Open the parts bag labeled A.
3. Using the mounting buttons and hardware in the parts bag labeled A, attach the mounting buttons in the square holes closest to the outside edge of each interface bracket (see Figure 2 and Figure 3).
4. Using the group number recorded your Large Flat Panel display model, proceed to “DETERMINE BRACKET INSTALLATION PROCEDURES” on page 11 and follow the instructions for your Large Flat Panel display model.

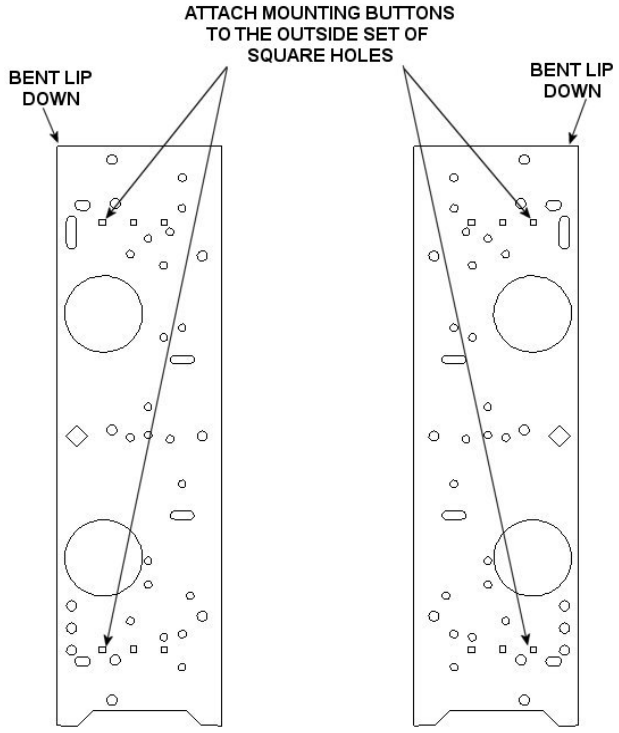

Figure 2. Brackets for Groups 1-9 with Bent Lip Down

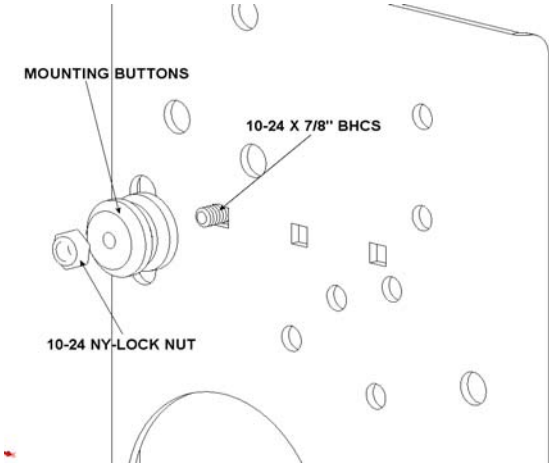

Figure 3. Button Installation for Groups 1-9

Groups 9-13 Hole Pattern:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

1. Lay the interface brackets out with the bent lip of each interface bracket down (see Figure 4).
2. Open the parts bag labeled A.
3. Using the mounting buttons and the hardware in the parts bag labeled A, attach the mounting buttons in the center square holes of each interface bracket (see Figure 4 and Figure 5).
4. Using the group number recorded your Large Flat Panel display model, proceed to "DETERMINE BRACKET INSTALLATION PROCEDURES" on page 11 and follow the instructions for your Large Flat Panel display model.

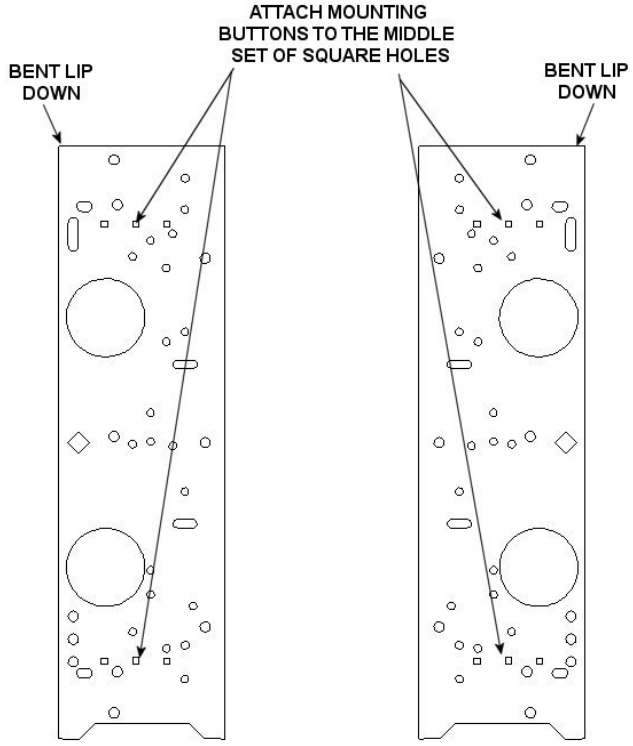

Figure 4. Brackets for Groups 10-13 with Bent Lip Down

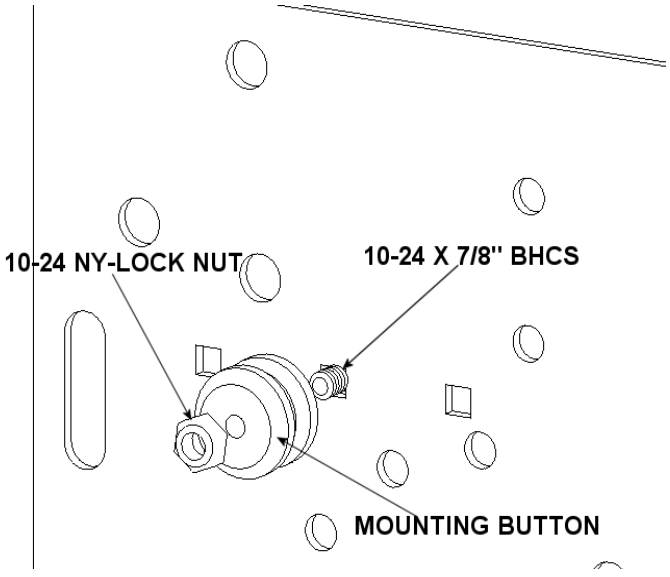

Figure 5. Button Installation for Groups 10-13

Groups 14-16 Hole Pattern:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

1. Lay the interface brackets out with the bent lip of each interface bracket down (see Figure 6).
2. Open the parts bag labeled A.
3. Using the mounting buttons and hardware in the parts bag labeled A, attach the mounting buttons in the square holes nearest the inside edge of each interface bracket (see Figure 6 and Figure 7).
4. Using the group number recorded your Large Flat Panel display model, proceed to "DETERMINE BRACKET INSTALLATION PROCEDURES" on page 11 and follow the instructions for your Large Flat Panel display model.

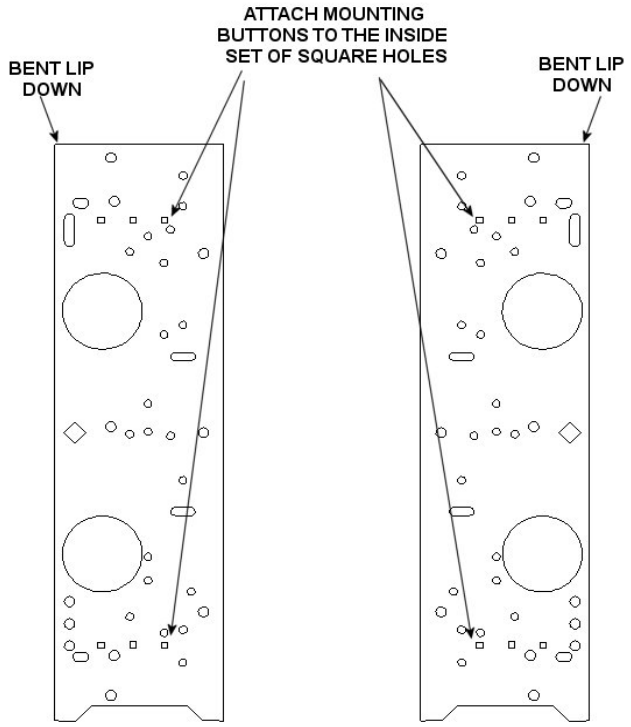

Figure 6. Brackets for Groups 14-16 with Bent Lip Down

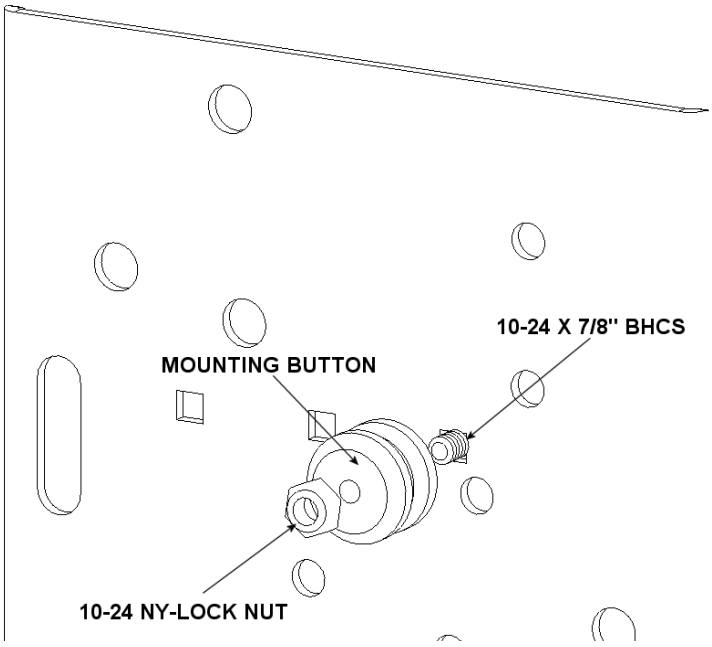

Figure 7. Button Installation for Groups 14-16

THIS PAGE
INTENTIONALLY
BLANK

DETERMINE BRACKET INSTALLATION PROCEDURES

Group 1 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled B and F.
2. Remove the Nylon spacers from the parts bag labeled B.
3. Place the four Nylon spacers over the mounting holes on your Large Flat Panel display (see Figure 8).
4. Place the interface brackets over the Nylon spacers (see Figure 9 and Figure 10).
5. Select the parts bag labeled F.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bag labeled F, attach the interface brackets to your Large Flat Panel display (see Figure 9 and Figure 10). Do not overtighten the mounting screws.

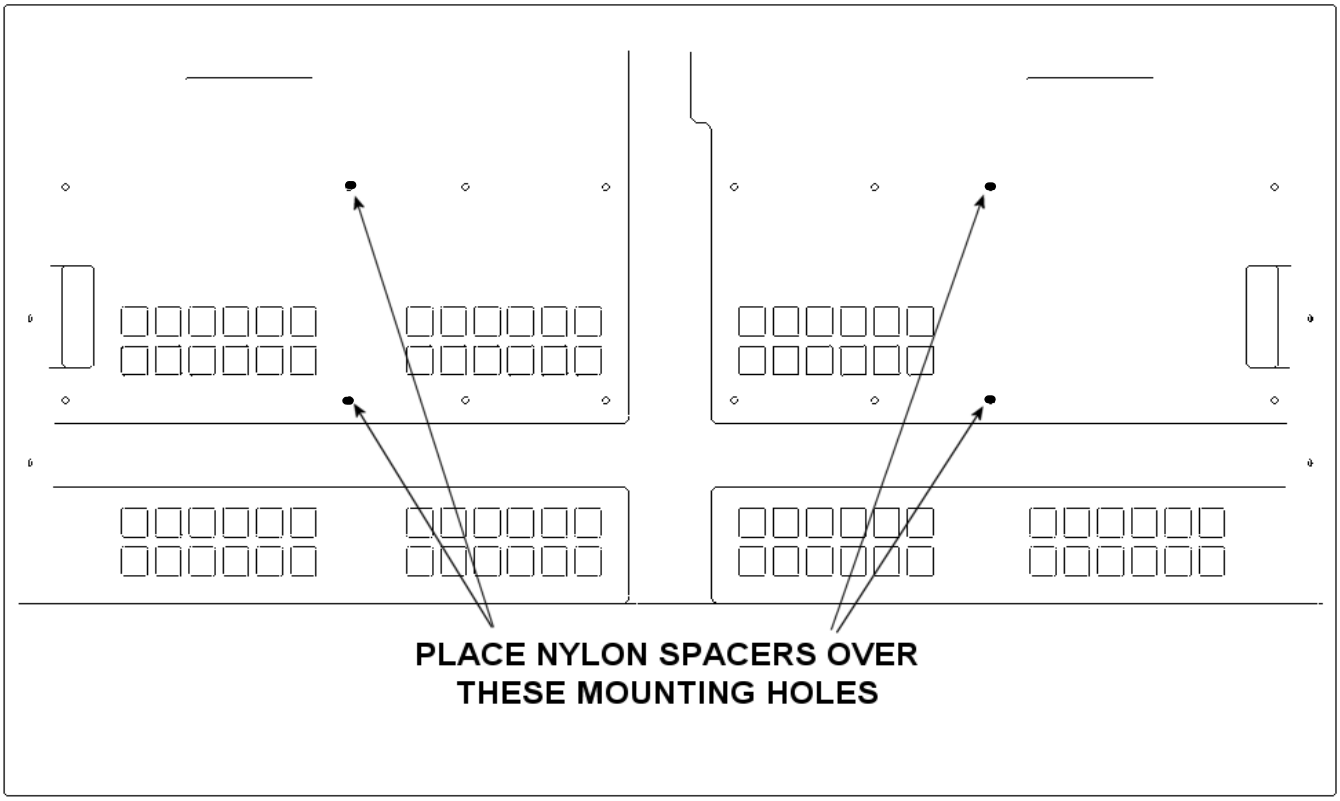

Figure 8. Spacer Location for Group 1

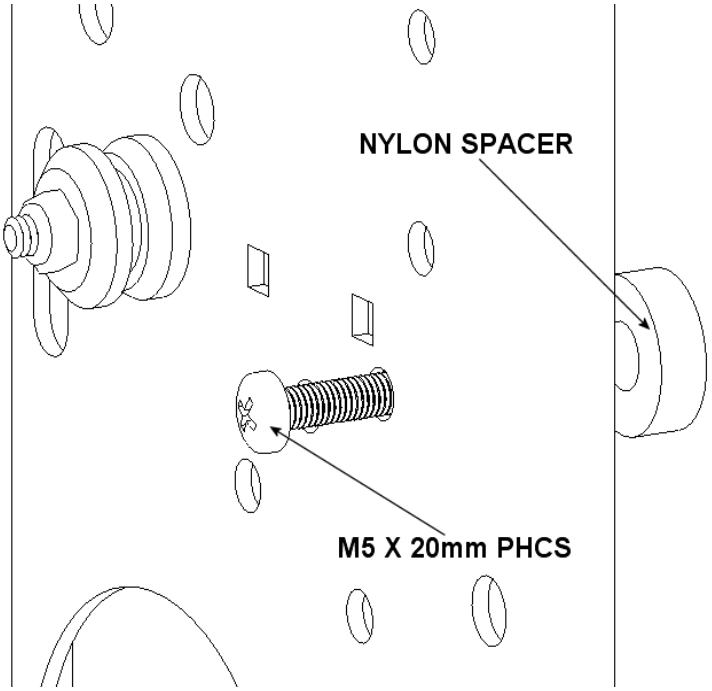

Figure 9. Spacer Installation for Group 1

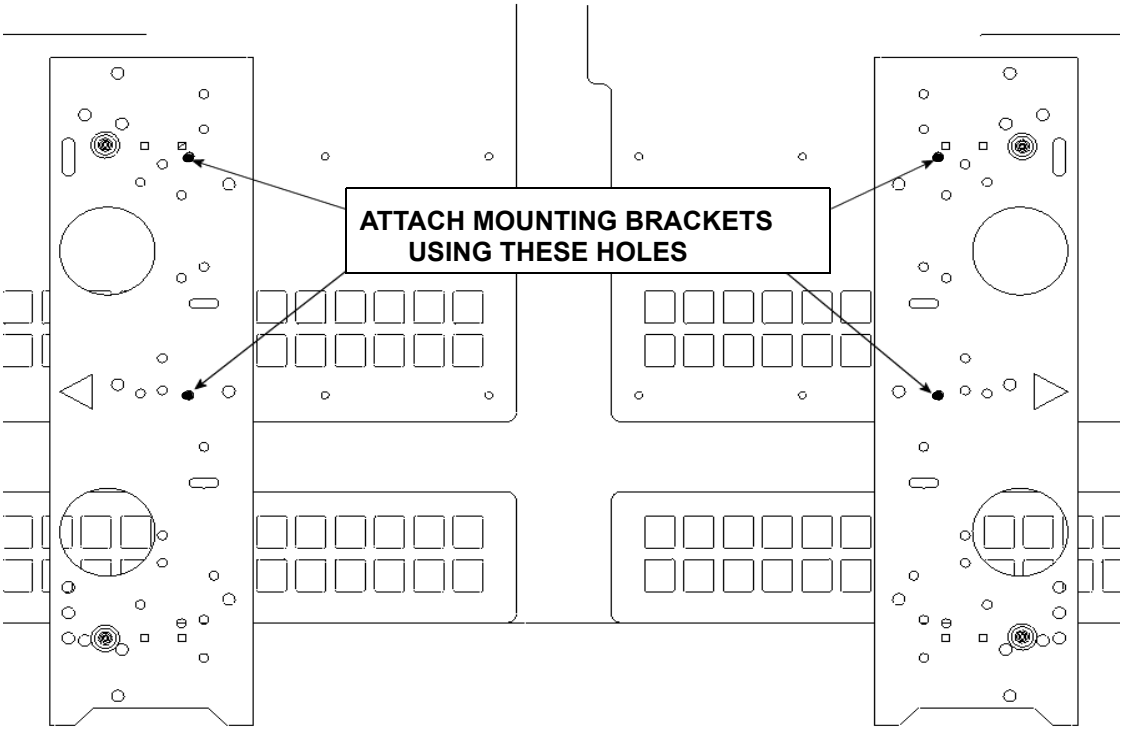

Figure 10. Bracket Attachment for Group 1

Group 2 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select parts bags labeled I and K.
2. Remove Nylon spacers from the parts bag labeled K.
3. Place the four Nylon spacers over the mounting holes on your Large Flat Panel display (see Figure 11).
4. Place the interface brackets over the Nylon spacers (see Figure 11 and Figure 12).
5. Select the parts bag labeled I.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bag labeled I, attach the interface bracket to your Large Flat Panel display in the top slot and bottom hole in each interface bracket (see Figure 11 and Figure 12). Do not overtighten the mounting screws.

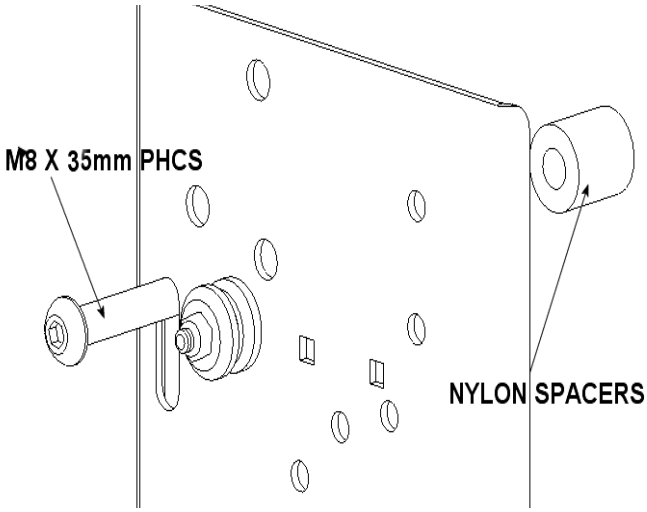

Figure 11. Spacer Installation for Group 2

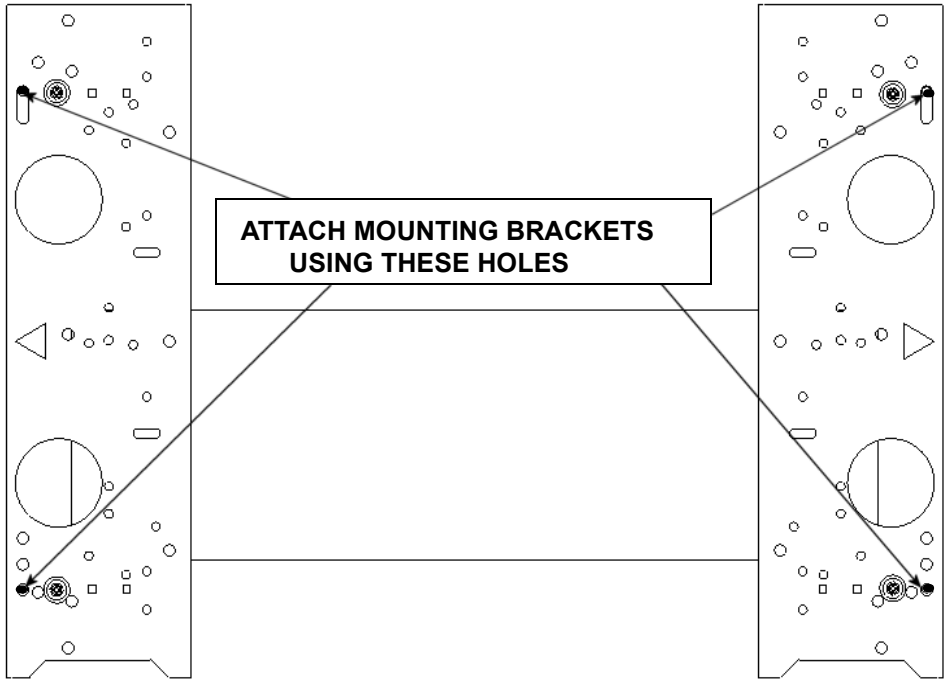

Figure 12. Bracket Attachment for Group 2

Group 3 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled B and E.
2. Remove the Nylon spacers from the parts bag labeled B.
3. Place the four Nylon spacers over the mounting holes on your Large Flat Panel display.
4. Place the interface brackets over the Nylon spacers (see Figure 13 and Figure 14).
5. Select the parts bag labeled E.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bag labeled E, attach the interface brackets to your Large Flat Panel display in the top slot and bottom hole in each interface bracket (See Figure 13 and Figure 14). Do not overtighten the mounting screws.

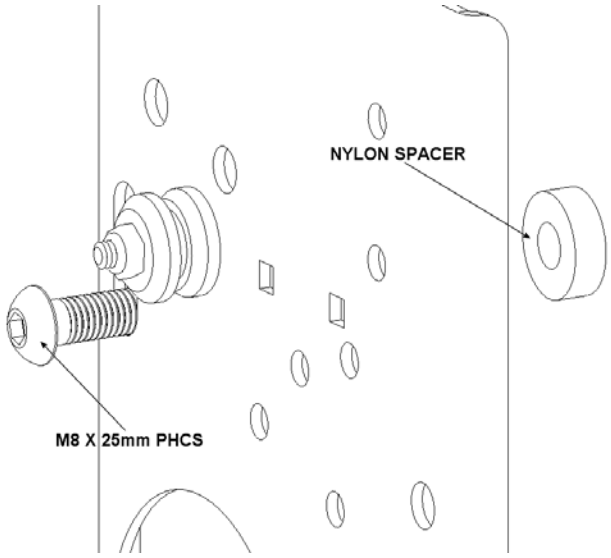

Figure 13. Spacer Installation for Group 3

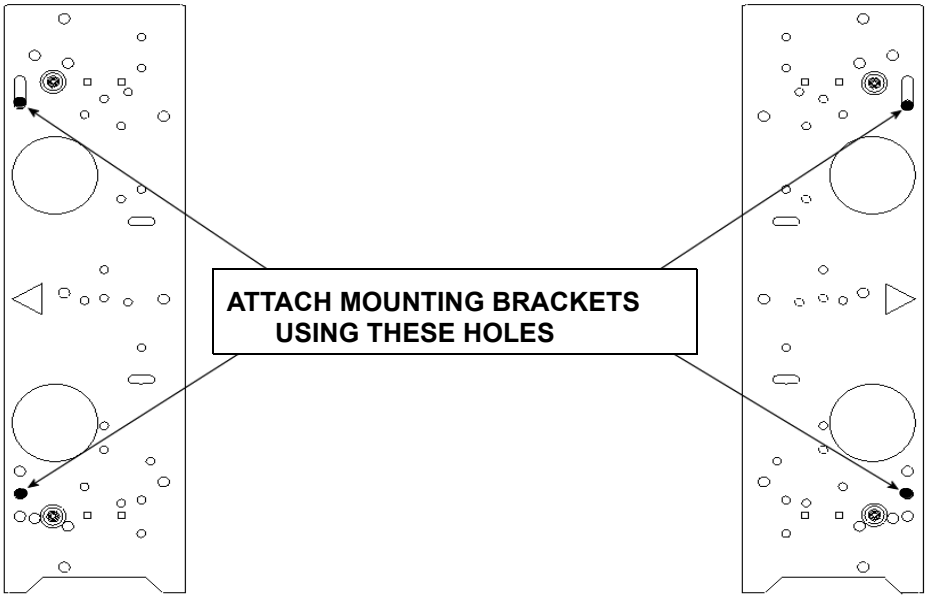

Figure 14. Bracket Attachment for Group 3

Group 4 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled J and K.
2. Remove the Nylon spacers from the hardware bag labeled K.
3. Place the four Nylon spacers over the mounting holes on your Large Flat Panel display (see Figure 15).
4. Place the interface brackets over the Nylon spacers (see Figure 15 and Figure 16).
5. Select the hardware bag labeled J.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bag labeled J, attach the interface brackets to your Large Flat Panel display in the top slot and bottom hole in each bracket (see Figure 15 and Figure 16). Do not overtighten the mounting screws.

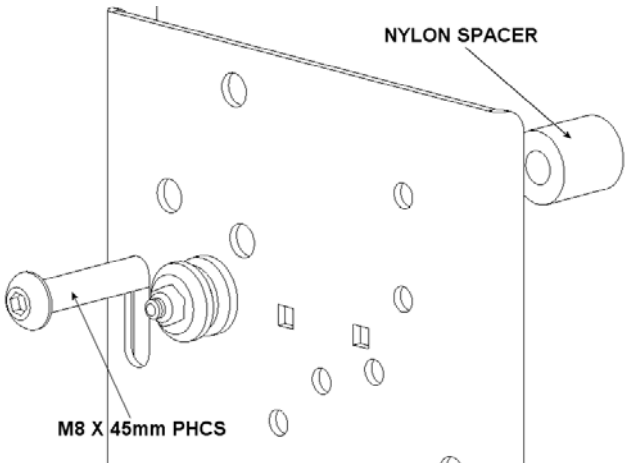

Figure 15. Spacer Installation for Group 4

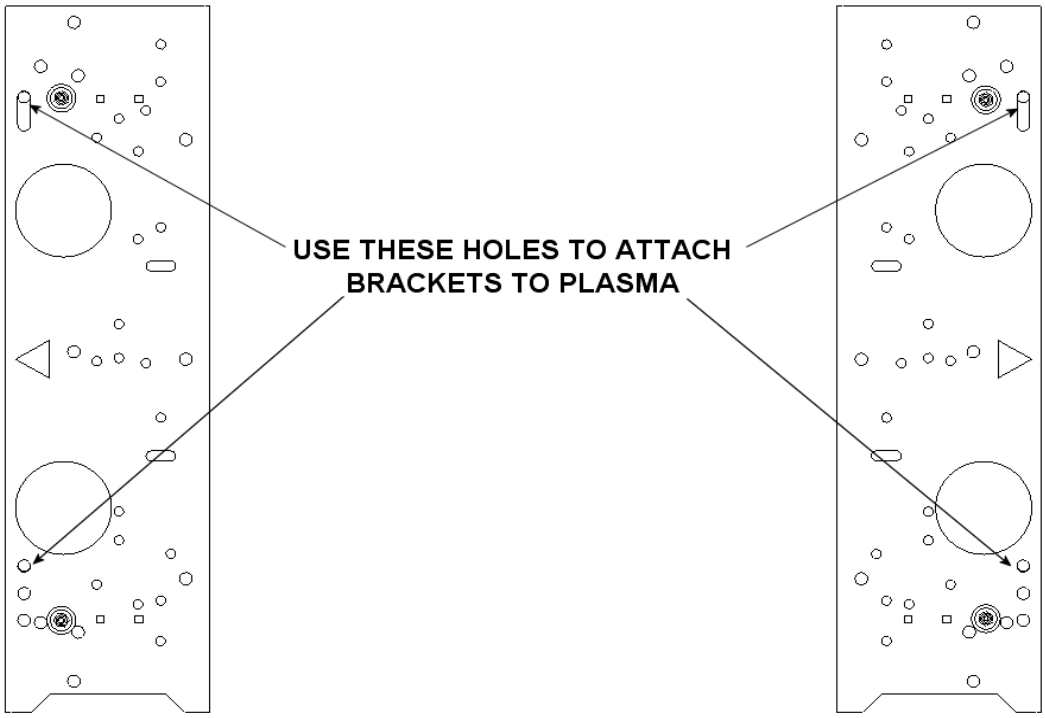

Figure 16. Bracket Attachment for Group 4

Group 5 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled D and L.
2. Remove the Nylon spacers from the parts bag labeled D.
3. Place the six Nylon spacers over the six mounting holes on your Large Flat Panel display (see Figure 17 and Figure 18).
4. Place the interface brackets over the Nylon spacers (see Figure 17 and Figure 18).
5. Select the parts bag labeled L.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bag labeled L, secure the interface brackets to your Large Flat Panel display (see Figure 17 and Figure 18). Do not overtighten the mounting screws.

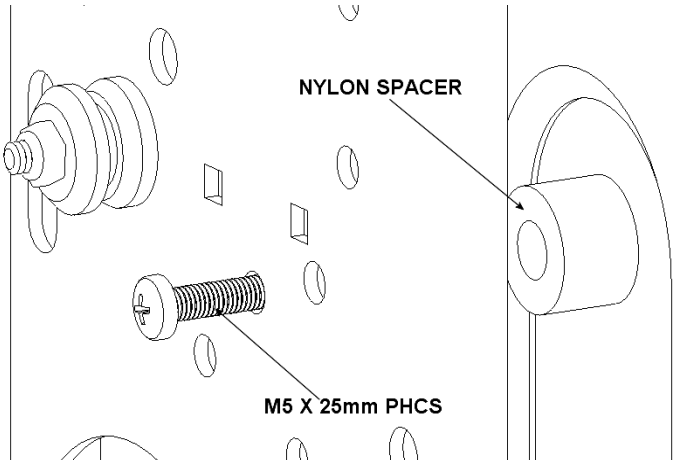

Figure 17. Spacer Installation for Group 5

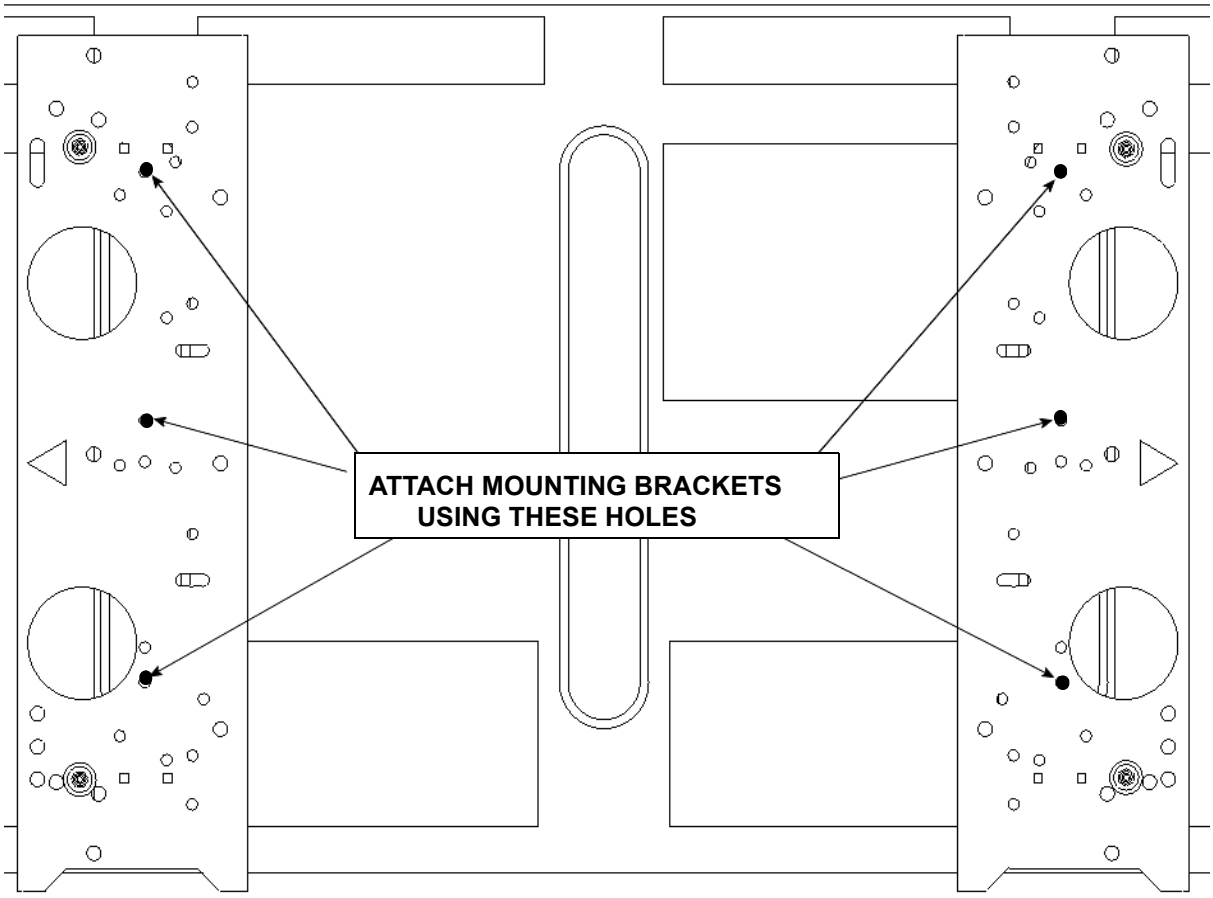

Figure 18. Bracket Attachment for Group 5

Group 6 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled D and I.
2. Remove the Nylon spacers from the parts bag labeled D.
3. Place the Nylon spacers over the four mounting holes on your Large Flat Panel display (see Figure 19 and Figure 20).
4. Place the interface brackets over the Nylon spacers (see Figure 20).
5. Select the parts bag labeled I.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bag labeled I, attach the interface brackets to your Large Flat Panel display (see Figure 19 and Figure 20). Do not overtighten the mounting screws.

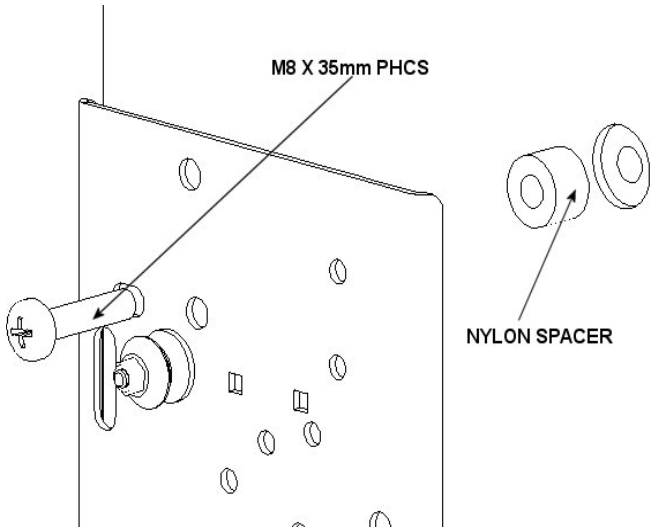

Figure 19. Spacer Installation for Group 6

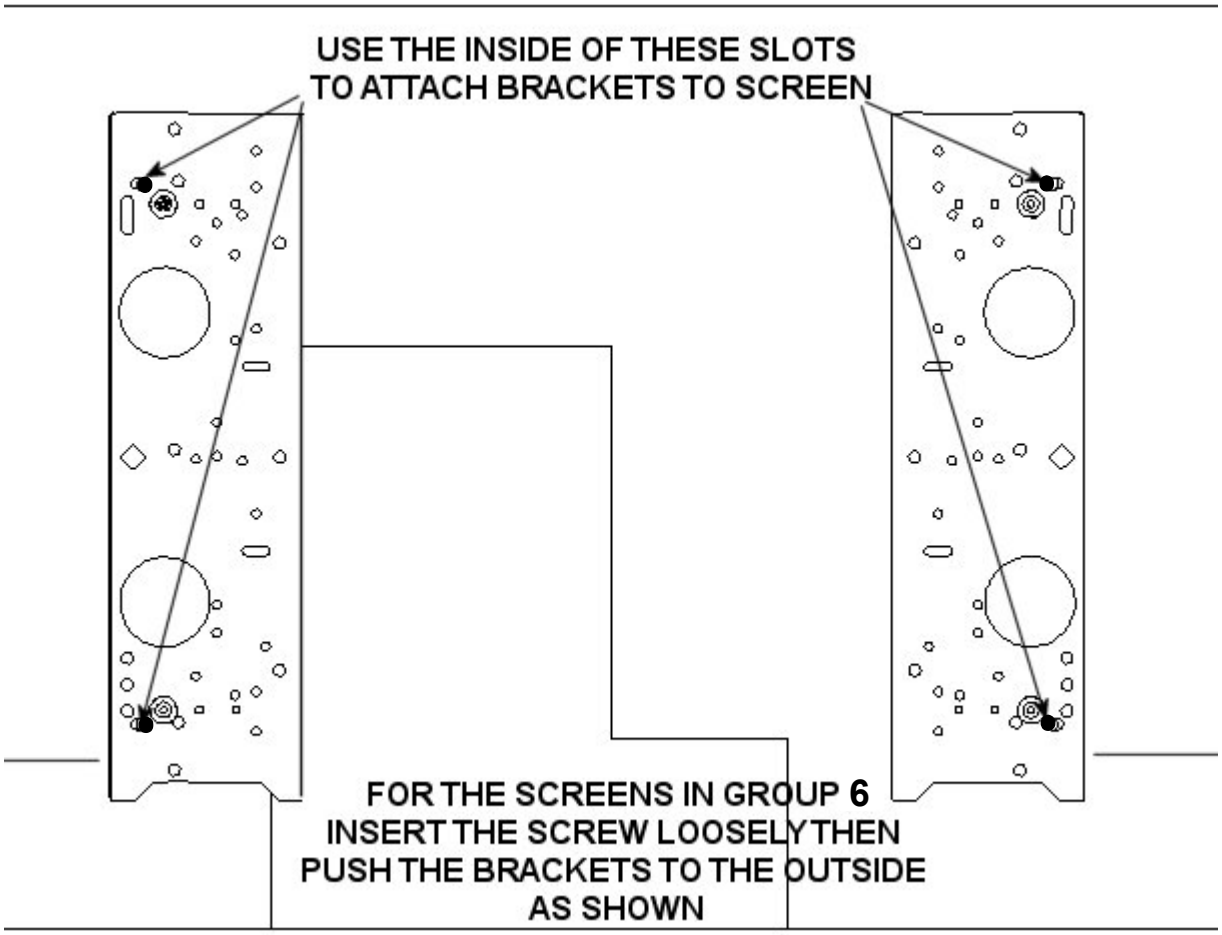
USE THE INSIDE OF THESE SLOTS
TO ATTACH BRACKETS TO SCREEN
FOR THE SCREENS IN GROUP 6
INSERT THE SCREW LOOSELY THEN
PUSH THE BRACKETS TO THE OUTSIDE
AS SHOWN

Figure 20. Bracket Attachment for Group 6

Group 7 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled B and H.
2. Remove the Nylon spacers from the parts bag labeled B.
3. Place the Nylon spacers over the six mounting holes on your Large Flat Panel display (see Figure 21 and Figure 22).
4. Place the interface brackets over the Nylon spacers (see Figure 22).
5. Select the parts bag labeled H.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bag labeled H, attach the interface brackets to your Large Flat Panel display. Do not overtighten the mounting screws.

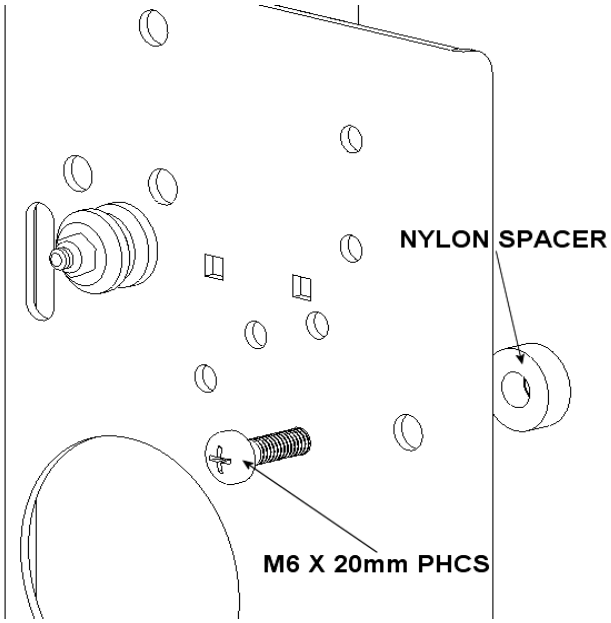

Figure 21. Spacer Installation for Group 7

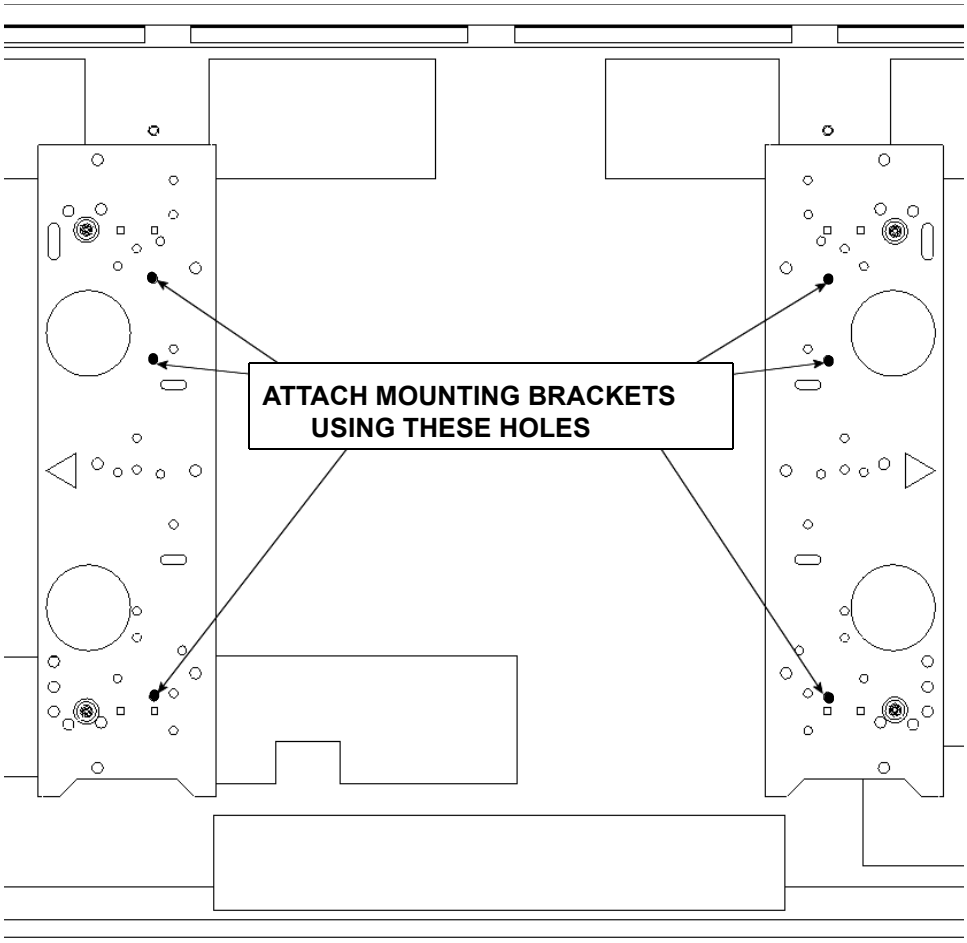

Figure 22. Bracket Attachment for Group 7

Group 8 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled B and H.
2. Remove the Nylon spacers from the parts bag labeled B.
3. Place the six Nylon spacers over the six mounting holes on your Large Flat Panel display (see Figure 23).
4. Place the interface brackets over the Nylon spacers (see Figure 23 and Figure 24).
5. Select the parts bag labeled H.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bag labeled H, attach the interface brackets to your Large Flat Panel display in the two top slots and bottom hole of each interface bracket (see Figure 23 and Figure 24). Do not overtighten the mounting screws.

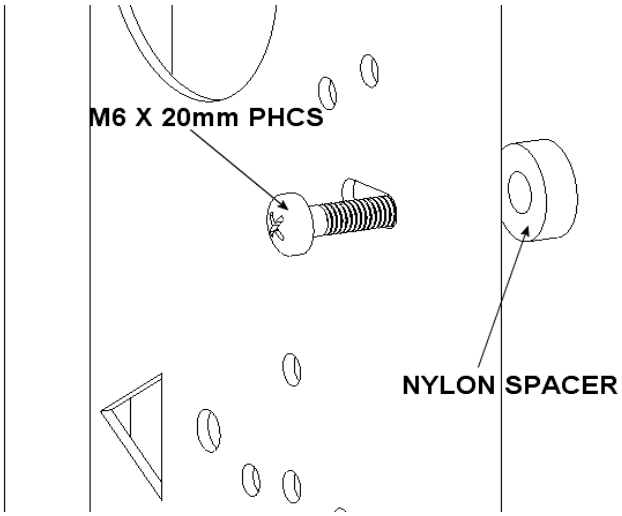

Figure 23. Spacer Location for Group 8

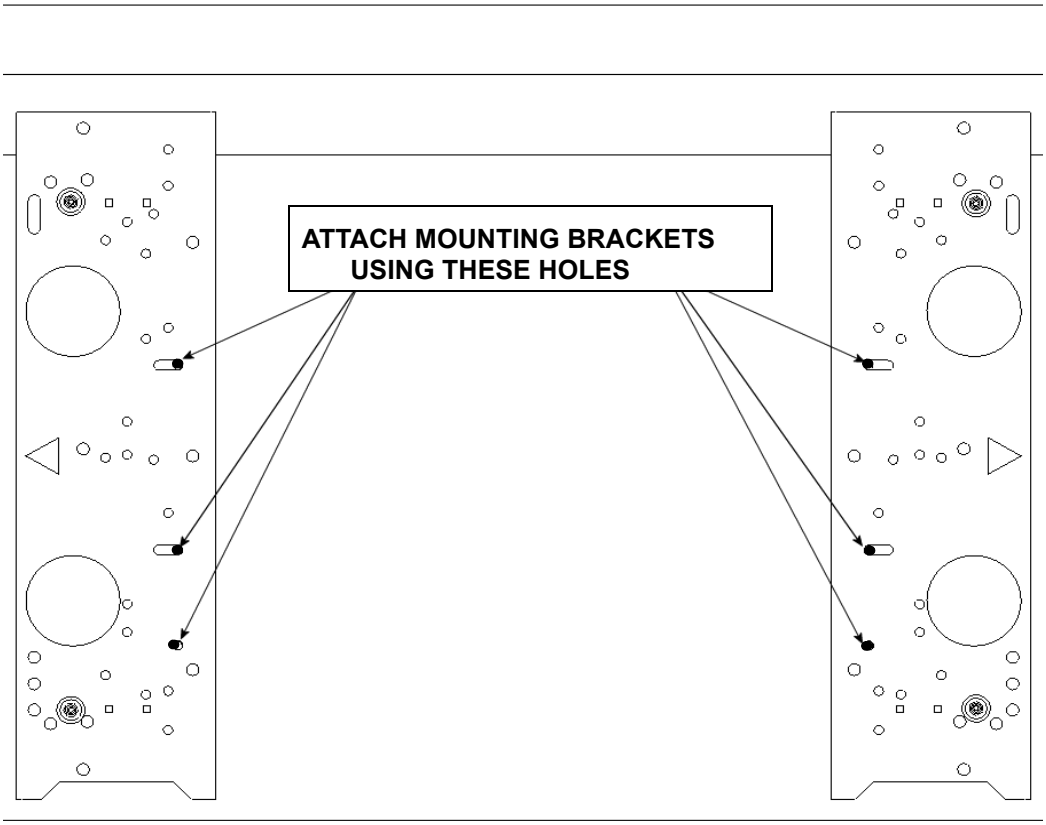

Figure 24. Bracket Attachment for Group 8

Group 9 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled B and C.
2. Remove the Nylon spacers from the parts bag labeled B.
3. Place the eight Nylon spacers over the mounting holes on your Large Flat Panel display (see Figure 25).
4. Place the interface brackets over the Nylon spacers (see Figure 25 and Figure 26).
5. Select the parts bag labeled C.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bag labeled C, attach the interface brackets to your Large Flat Panel display using the top hole, middle two slots, and the bottom hole of each interface bracket (see Figure 25 and Figure 26). Do not overtighten the mounting screws.

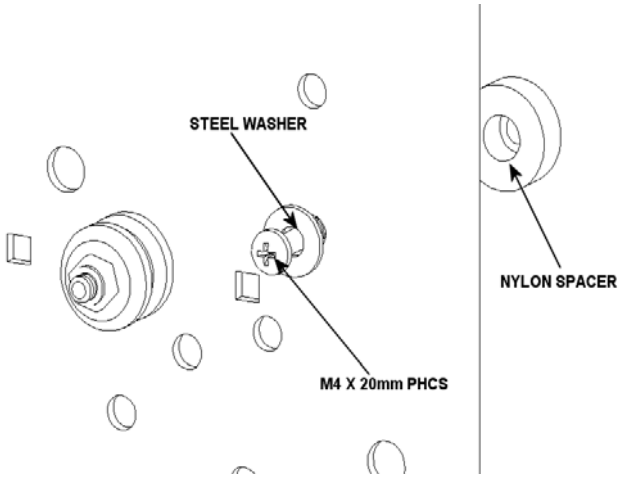

Figure 25. Spacer Location for Group 9

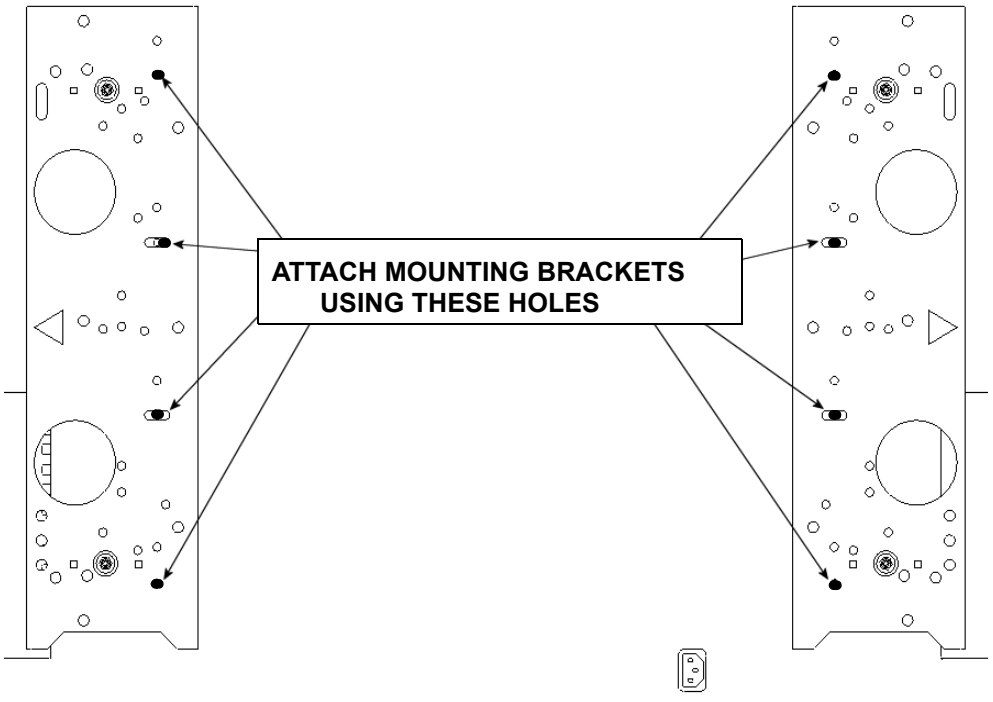

Figure 26. Bracket Attachment for Group 9

Group 10 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled B and E.
2. Remove the Nylon spacers from the parts bag labeled B.
3. Place the six Nylon spacers over the mounting holes on your Large Flat Panel display (see Figure 27).
4. Place the interface brackets over the Nylon spacers (see Figure 27 and Figure 28).
5. Select the parts bags labeled E.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bags labeled E, secure the interface brackets to your Large Flat Panel display using the six holes of each interface bracket (see Figure 27 and Figure 28). Do not overtighten the mounting screws.

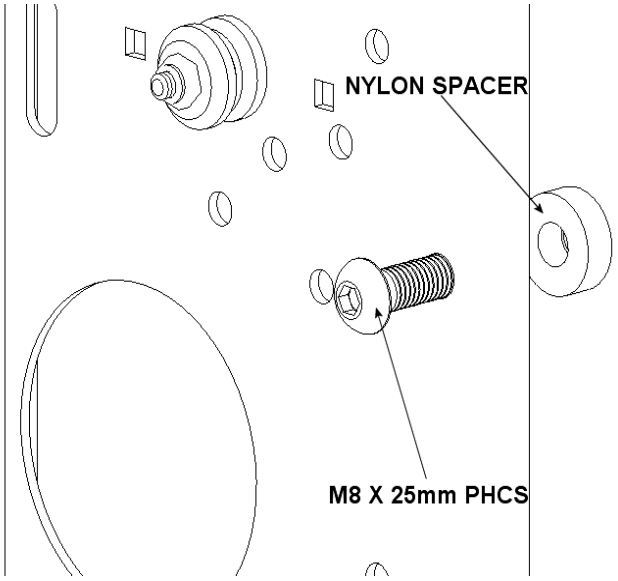

Figure 27. Spacer Installation for Group 10

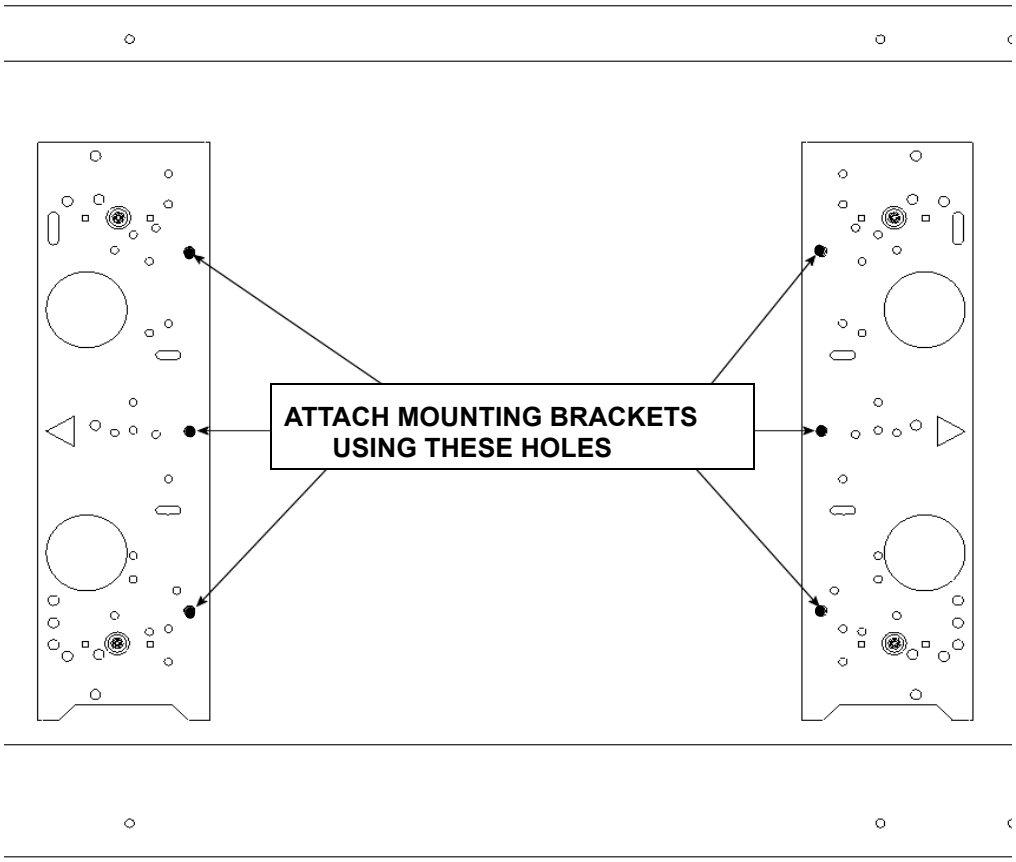

Figure 28. Bracket Attachment for Group 10

Group 11 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled B and F.
2. Remove the Nylon spacers from the parts bag labeled B.
3. Place the Nylon spacers over the eight mounting holes on your Large Flat Panel display (see Figure 29 and Figure 30).
4. Place the interface brackets over the Nylon spacers (see Figure 30).
5. Select the parts bag labeled F.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware in the parts bags labeled F, secure the interface brackets to your Large Flat Panel display (see Figure 30). Do not overtighten the mounting screws.

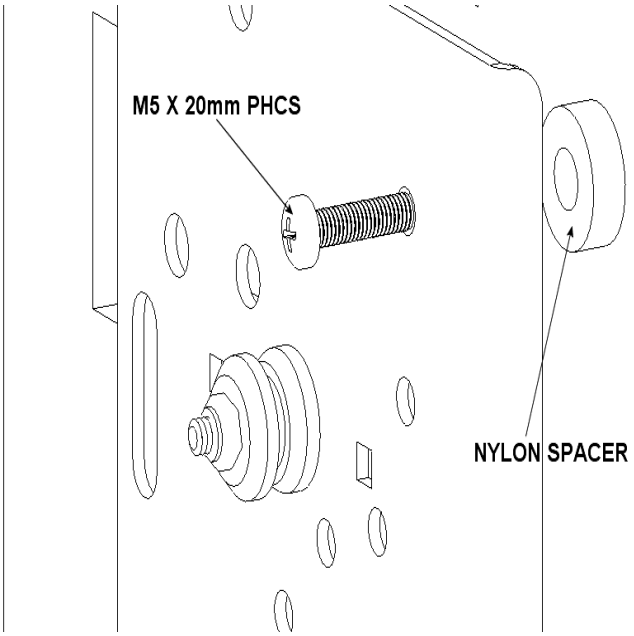

Figure 29. Spacer Installation for Group 11

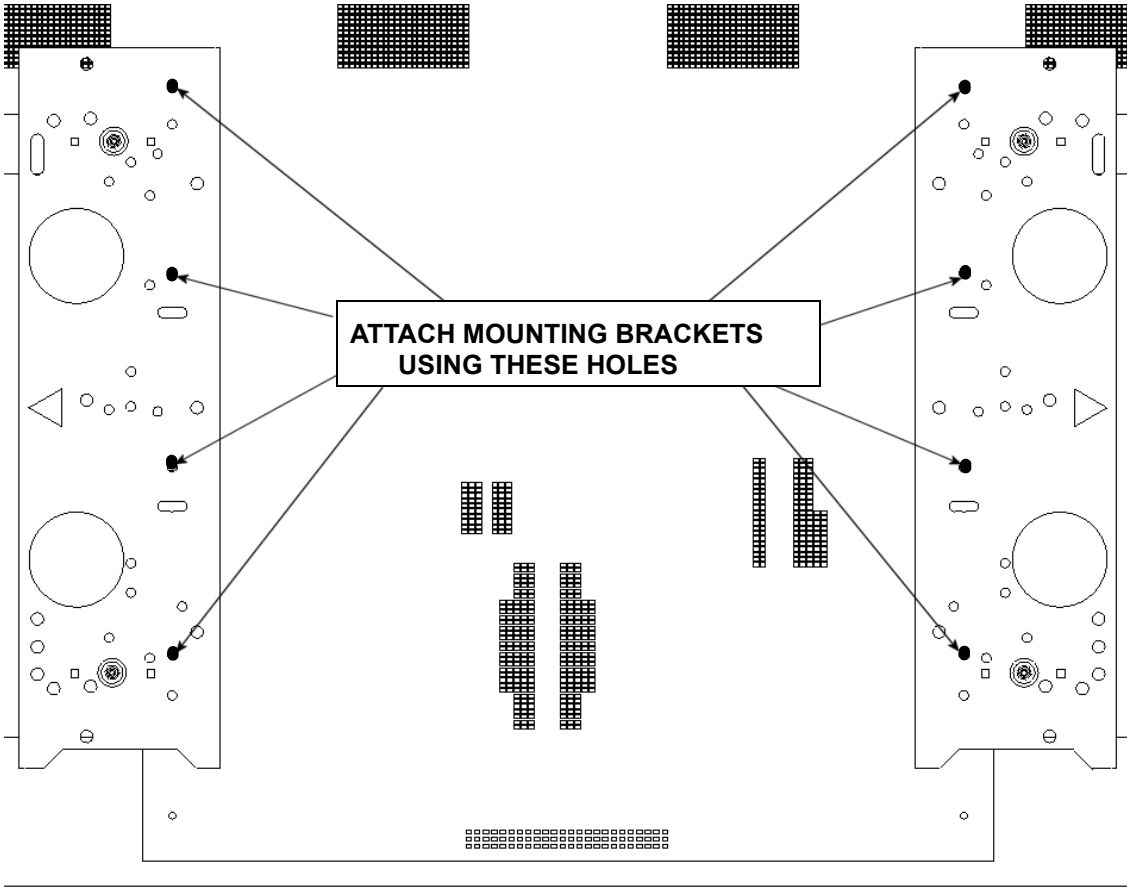

Figure 30. Bracket Attachment for Group 11

Group 12 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled I and K.
2. Remove the Nylon spacers from the parts bag labeled K.
3. Place the Nylon spacers over the four mounting holes on your Large Flat Panel display (see Figure 31 and Figure 32).
4. Place the interface brackets over the Nylon spacers (see Figure 31 and Figure 32).
5. Select the parts bag labeled I.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware from the parts bag labeled I, attach the interface brackets to your Large Flat Panel display (see Figure 31 and Figure 32). Do not overtighten the mounting screws.

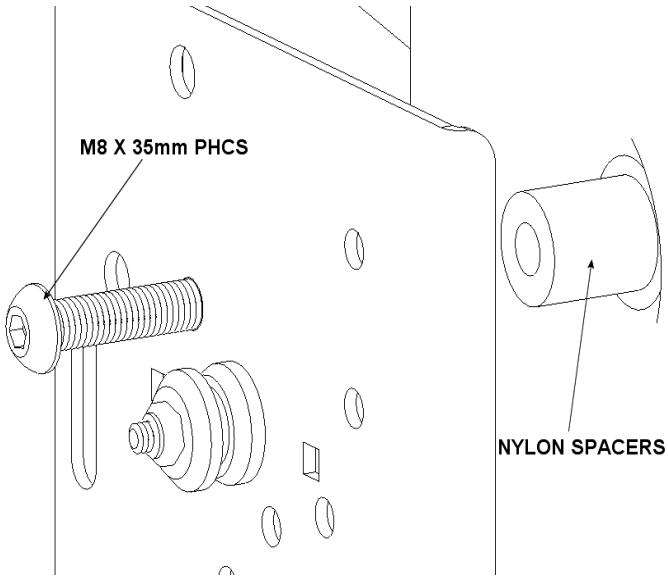

Figure 31. Spacer Installation for Group 12

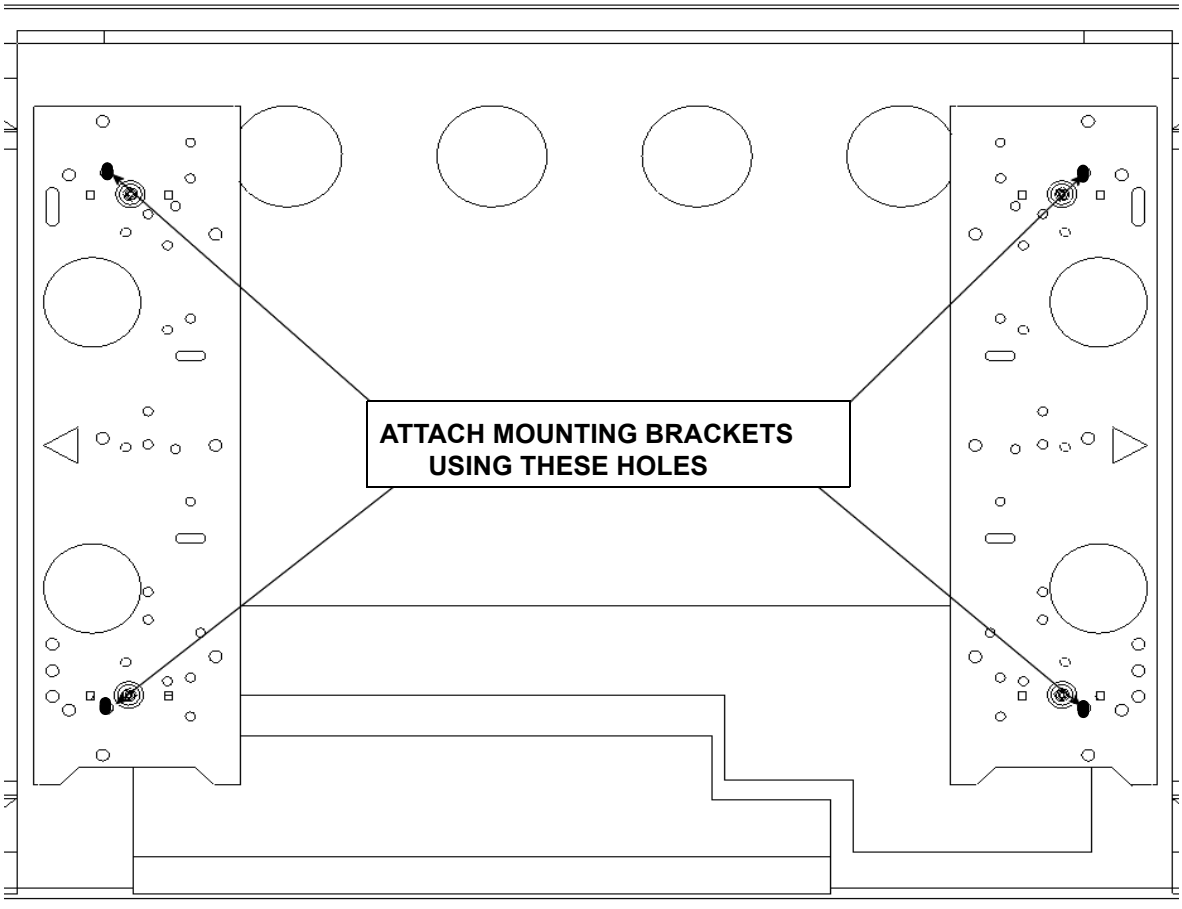

Figure 32. Bracket Attachment for Group 12

Group 13 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled I and K.
2. Remove the Nylon spacers from the parts bag labeled K.
3. Place the four Nylon spacers over the mounting holes on your Large Flat Panel display (see Figure 33).
4. Place the interface brackets over the Nylon spacers (see Figure 33 and Figure 34).
5. Select the parts bag labeled I

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

5. Using the hardware in the parts bag labeled I, secure the interface brackets to your Large Flat Panel display (see Figure 33 and Figure 34). Do not overtighten the mounting screws.

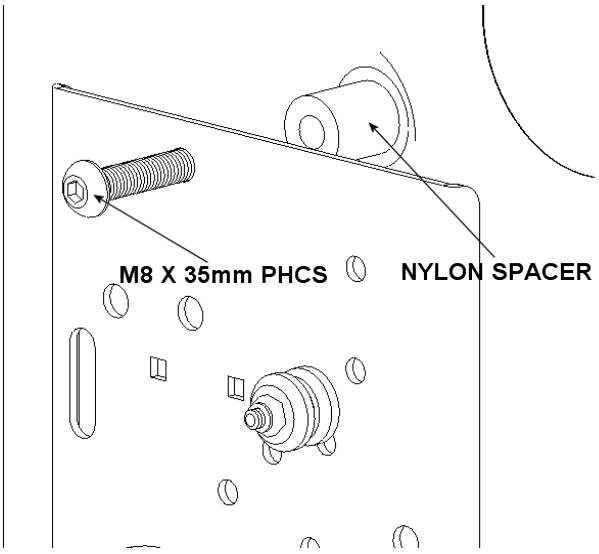

Figure 33. Spacer Installation for Group 13

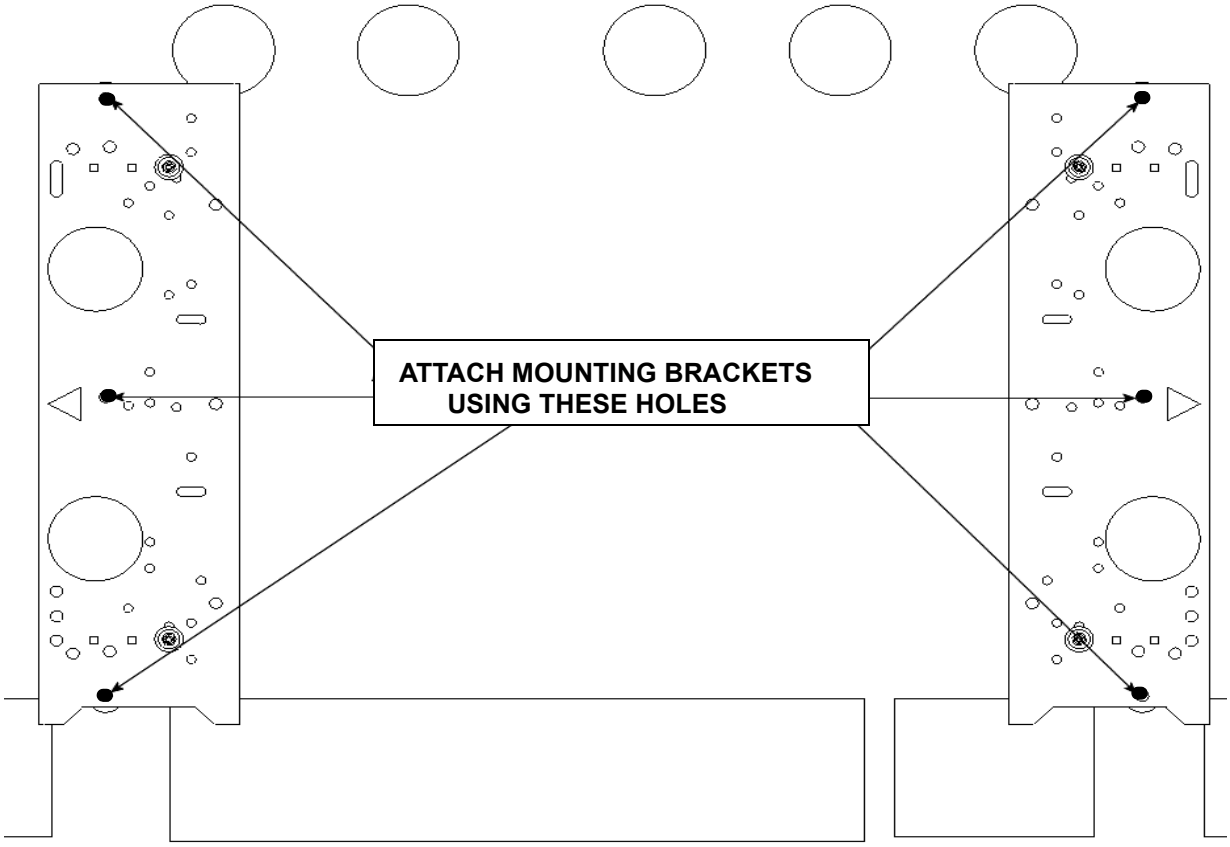

Figure 34. Bracket Attachment for Group 13

Group 14 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled D and I.
2. Remove the Nylon spacers from the parts bag labeled D.
3. Place the Nylon spacers over the four mounting holes on your Large Flat Panel display (see Figure 35).
4. Place the interface brackets over the Nylon spacers (see Figure 35 and Figure 36).
5. Select the parts bag labeled I.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

5. Using the hardware from the parts bag labeled I, attach the interface brackets to your Large Flat Panel display (see Figure 35 and Figure 36). Do not overtighten the mounting screws.

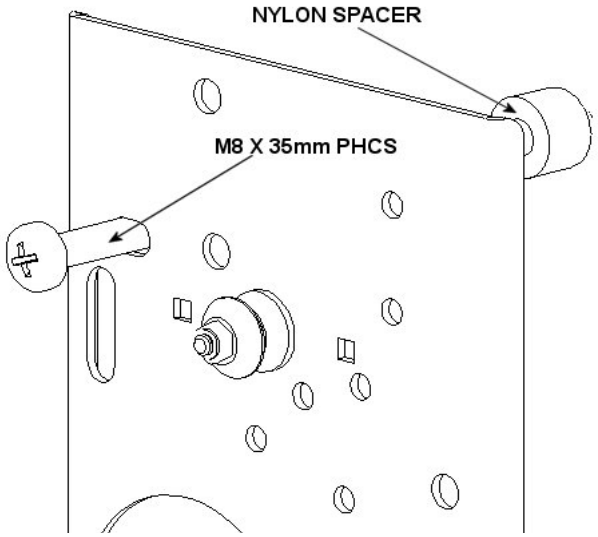

Figure 35. Spacer Installation for Group 14

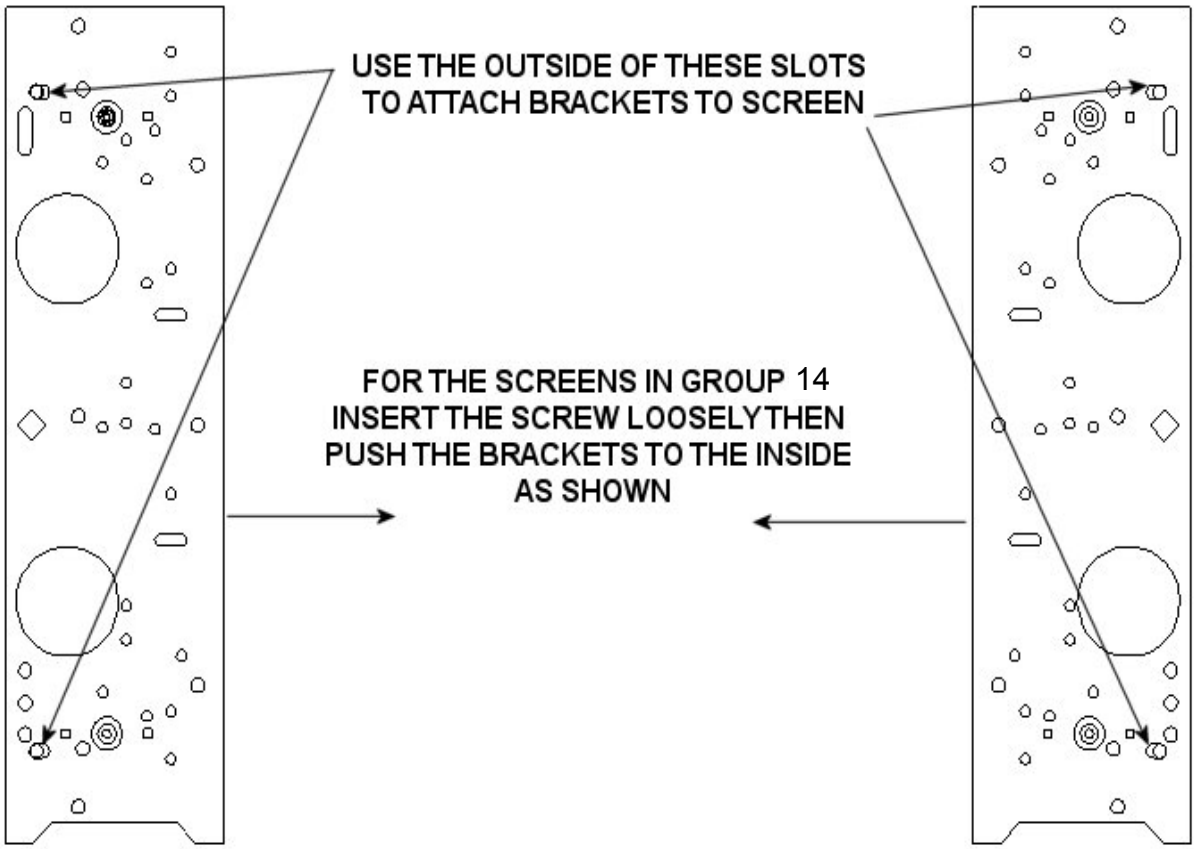
USE THE OUTSIDE OF THESE SLOTS
TO ATTACH BRACKETS TO SCREEN
FOR THE SCREENS IN GROUP 14
INSERT THE SCREW LOOSELY THEN
PUSH THE BRACKETS TO THE INSIDE
AS SHOWN

Figure 36. Bracket Attachment for Group 14

Group 15 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled B and F.
2. Remove the Nylon spacers from the parts bag labeled B.
3. Place the Nylon spacers over the six mounting holes on your Large Flat Panel display (see Figure 37).
4. Place the interface brackets over the Nylon spacers (see Figure 37 and Figure 38).
5. Select the parts bag labeled F.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

5. Using the hardware from the parts bag labeled F, attach the interface brackets to your Large Flat Panel display (see Figure 37 and Figure 38). Do not overtighten the mounting screws.

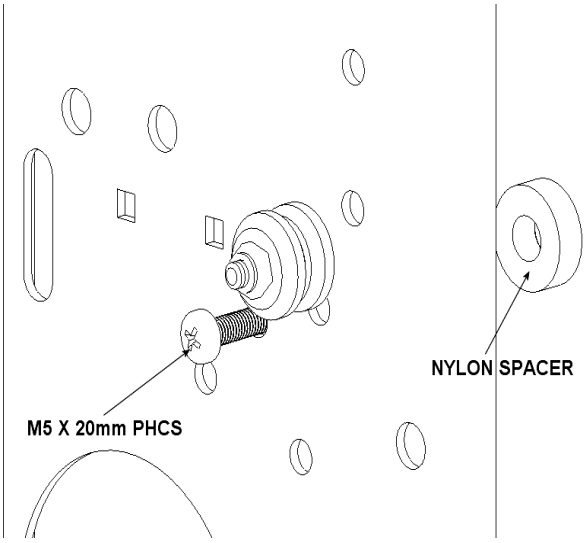

Figure 37. Spacer Installation for Group 15

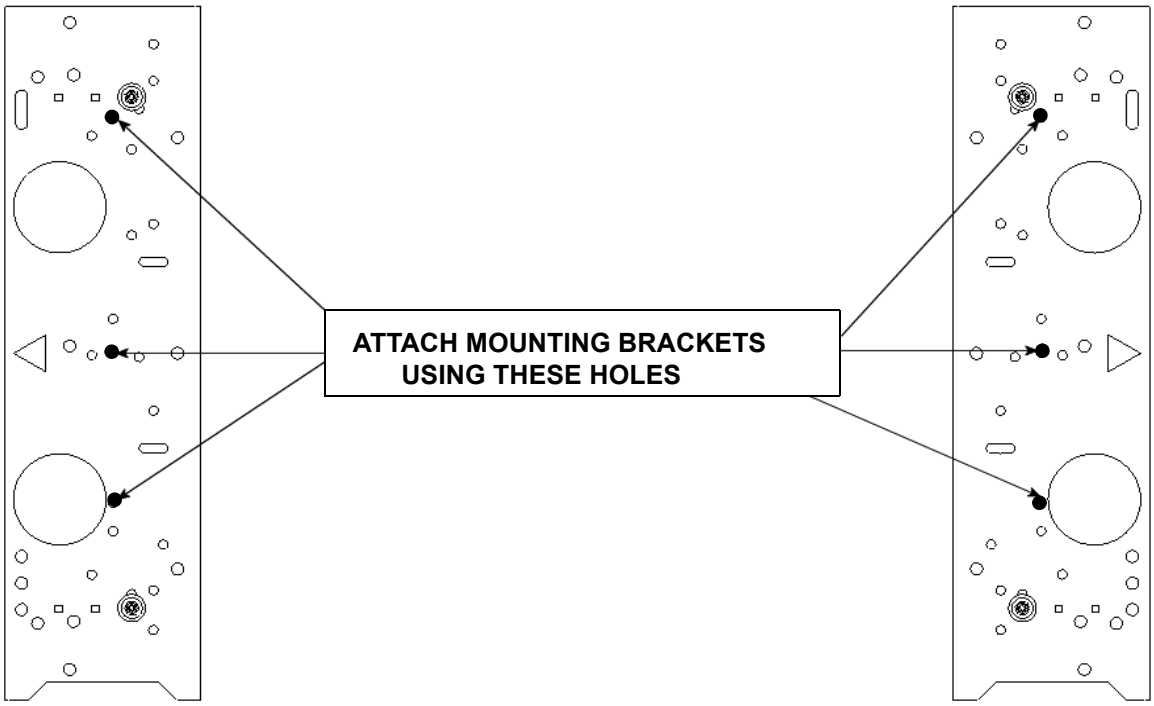

Figure 38. Bracket Attachment for Group 15

Group 16 Installation Procedures:

WARNING: You must use proper attaching hardware and installation procedures. Failure to use proper attaching hardware and installation procedures may result in equipment damage or serious personal injury.

Attach Interface Brackets

1. Identify and select the parts bags labeled B and F.
2. Remove the Nylon spacers from the parts bag labeled B.
3. Place the Nylon spacers over the six mounting holes on your Large Flat Panel display (see Figure 39).
4. Place the interface brackets over the Nylon spacers (see Figure 39 and Figure 40).
5. Select the parts bag labeled F.

CAUTION: Overtightening mounting screws may damage your Large Flat Panel display.

6. Using the hardware from the parts bag labeled F, attach the interface brackets to your Large Flat Panel display (see Figure 39 and Figure 40). Do not overtighten the mounting screws.

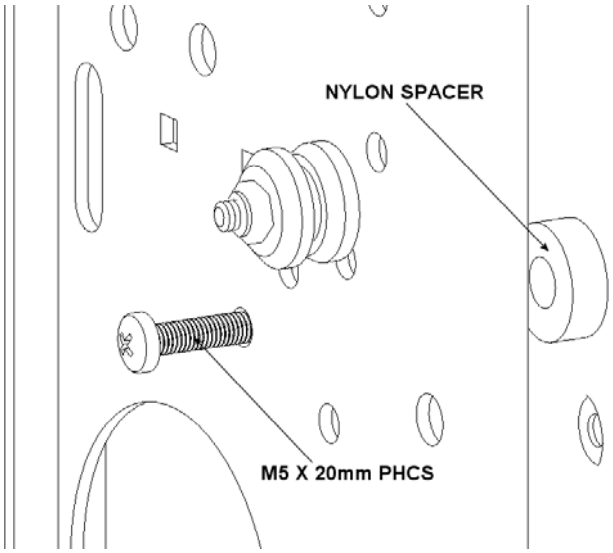

Figure 39. Spacer Installation for Group 16

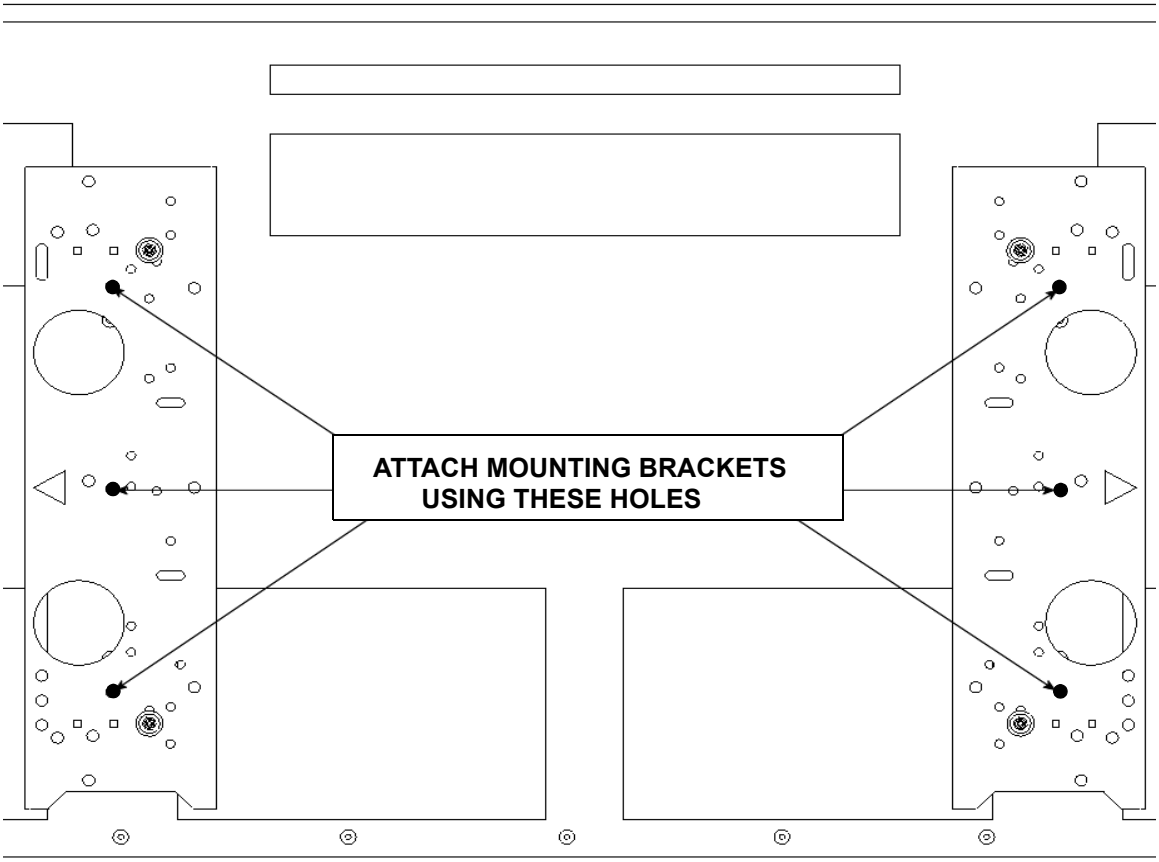

Figure 40. Bracket Attachment for Group 16